



Wood Treated Right™

Backyard Projects



Wood Treated Right™



Back Wall

▲ 6" x 6" Timbers as required

Steps

▲ 4" x 4" Timbers as required. Length will depend on width of Steps desired. Number of Steps to be determined by size of slope.

Side Wall



▲ Staggered as shown. Use 6" x 6" Timbers as needed, 6' lengths.

Hardware


▲ 12" Hot-dipped Galvanized Spikes as needed. 1" Reinforcing Rods or 1" Pipe, 3' lengths. Use 1 Rod/Pipe for each Back Tie.

Back Wall

6" x 6" Timber

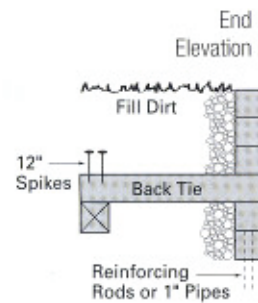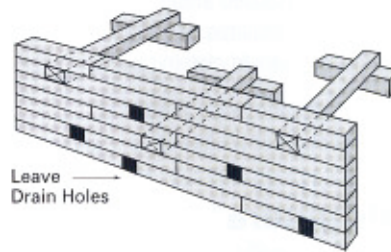

6" x 6" Timber Steps

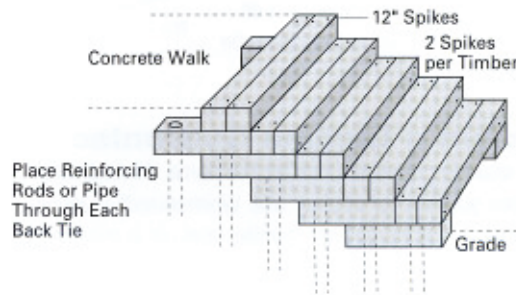

Side Wall

6" x 6" Timber

